

Exiting the vehicle

SINGLE LOCKING

Press the lock button on the Smart key briefly to single lock the vehicle and activate the Perimeter alarm. The hazard warning lamps will flash to confirm.

Single locking secures the vehicle and prevents the doors from being opened from the outside. The doors may still be unlocked and opened from inside the vehicle. In this state, only the Perimeter alarm is activated. See **17, MISLOCK**.

Note: This setting should be used in circumstances, such as travelling on a ferry, when pets are to be left in the vehicle, or if a window must be left open, etc.

Note: Always secure your vehicle when left unattended. Where possible, always secure your vehicle to the maximum available level of security.

DOUBLE LOCKING



Never double lock the vehicle with people, children, or pets inside. In the event of an emergency, they would be unable to escape and the emergency services would be unable to release them quickly.

Press the lock button on the Smart key twice within 3 seconds to double lock the vehicle and activate the full alarm system. The hazard warning lamps will flash twice to confirm and a double lock tone will sound.

Double locking secures the vehicle and prevents the doors from being opened from inside or outside of the vehicle. The doors cannot be unlocked or opened from inside the vehicle when double locked.

This provides extra security if the vehicle is left unattended. The vehicle cannot be opened by breaking a window and operating the door locks from inside. Additionally, Double locking also activates the full alarm system, see **15, FULL ALARM**.

Note: In this state, an open window may cause the alarm to sound due to the movement of air currents. For this reason, make sure all of the windows are fully closed before Double locking the vehicle.

LOCK CONFIRMATION

If you are uncertain whether the vehicle is locked and armed (either by Single or Double locking), press either the Smart key lock button or, if Keyless entry is fitted, touch an exterior door handle lock sensor. The hazard warning lamps will flash once to indicate and confirm the current lock status.

Note: If the vehicle is **not** already locked and armed, pressing the lock button will single lock the vehicle. Press again to double lock, if required.

AUTOMATIC RELOCKING AND RE-ARMING OF THE ALARM

If a door, the tailgate or the bonnet are not opened within 40 seconds of unlocking the vehicle via the Smart key, all of the doors will re-lock automatically to the previous locked state and the alarm will re-arm.

PERIMETER ALARM

The perimeter alarm system is activated when the vehicle is single locked. See **14, SINGLE LOCKING**.

Once activated, the alarm system will sound if:

- The bonnet, tailgate or a door is opened.