
MANUAL SEATS

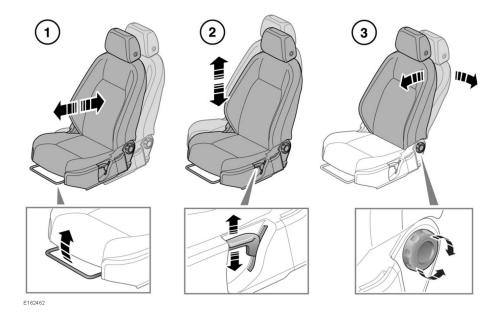

- 1. Forward and rearward adjustment.
- 2. Height adjustment.
- 3. Seatback angle adjustment.

For information on how to adjust the front head restraint, see **29**, **FRONT HEAD RESTRAINTS**.



Do not adjust the seat while the vehicle is moving; doing so could cause a loss of vehicle control and personal injury.