


## MANUAL SEATS

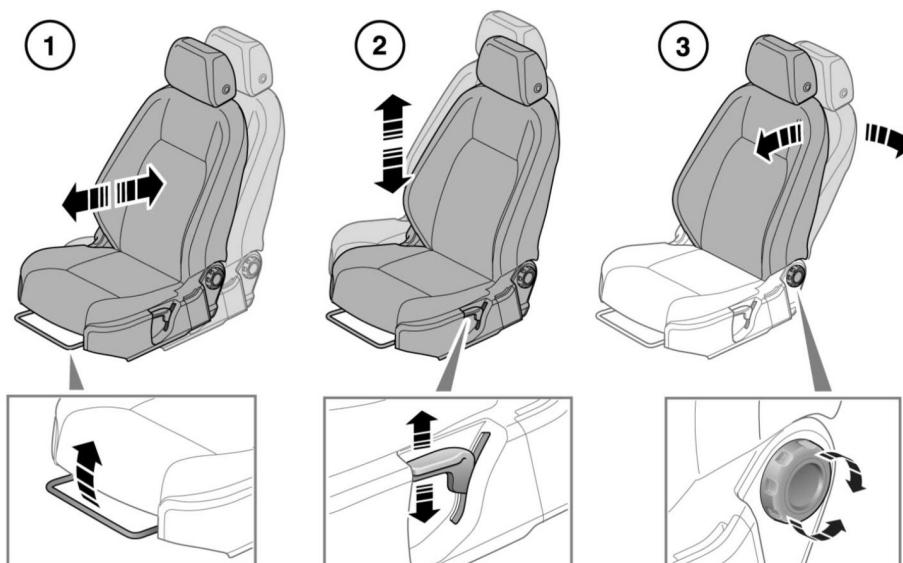

E162462

1. Forward and rearward adjustment.
2. Height adjustment.
3. Seatback angle adjustment.

For information on how to adjust the front head restraint, see **29, FRONT HEAD RESTRAINTS**.



**Do not adjust the seat while the vehicle is moving; doing so could cause a loss of vehicle control and personal injury.**