


## HEADLAMP REMOVAL

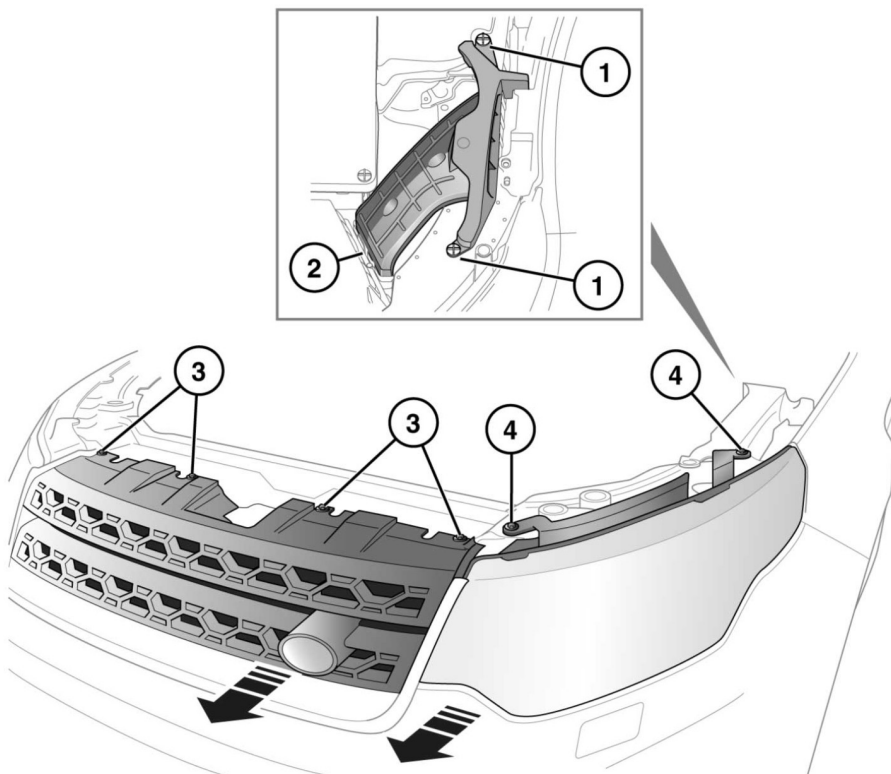


E165250

Moving the left headlamp unit to access the bulbs:

1. Remove the 2 plastic fixings.
2. Pull the tube up, to release it from the air box. This will allow more room for manoeuvrability.
3. Remove the 4 grille fixings.
4. Remove the 2 retaining bolts.

The headlamp unit can be withdrawn by 45 mm (1.8 inches).

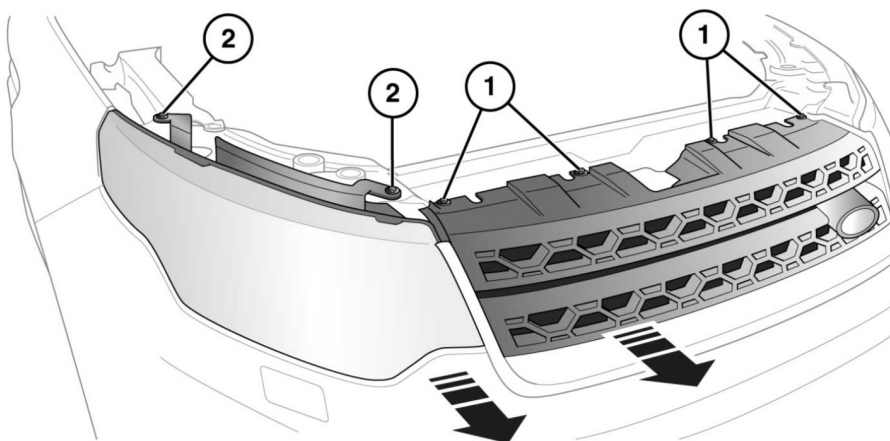

E165251

Moving the right headlamp unit to access the bulbs:

1. Remove the 4 grille fixings.
2. Remove the 2 retaining bolts.

The headlamp unit can be withdrawn by 45 mm (1.8 inches).