

6. Rear interior/reading lamps: Illuminate when the doors are unlocked and extinguish 60 seconds after all of the doors are closed, when the engine starts or when the vehicle is locked. Press the switch to switch on and off manually. Touch the front courtesy lamp lens for approximately 2 seconds to deactivate/activate automatic illumination of the rear interior lamps.
7. Rear interior/reading lamps: As item 6, fitted to 7 seat vehicles only.
8. Loadspace lamp: Illuminates when the tailgate is opened.

### INTERIOR LIGHTS INTENSITY

While the exterior lamps are turned on, the intensity of the interior switch illumination can be adjusted. See **290, DRIVER CONTROLS**.

### AMBIENT LIGHTING

On some vehicles the LED ambient lighting can be configured for colour and intensity through the Touch screen. Although the exterior lamps must be turned on while changes are being made, a 1 second preview of any changes made can be seen if the exterior lamps are turned off. See **80, EXTRA FEATURES**.

**Note:** *Vehicles without configurable ambient lighting will illuminate the standard white light for the interior lamps.*