


A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant soft key (1 or 2) on the timer setup menu.

## TIMED CLIMATE REMOTE CONTROLS

The Timed climate remote control has an approximate range of 100 metres (110 yards). There is no need to point the antenna at the vehicle.

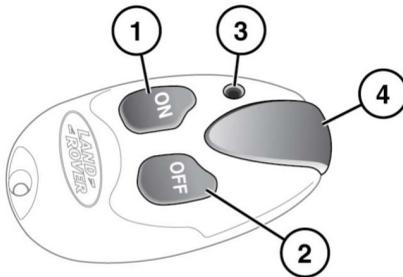

E155970

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

**Note:** Avoid touching the antenna when operating the **ON** or **OFF** buttons.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate to confirm that an automatic heating programme has been initiated. The LED flashes once every 2 seconds to indicate that the heater is active.

The heating program will continue for 20-30 minutes, when it will switch off automatically to prevent the vehicle's battery from discharging. It also turns off automatically if the engine is started.


The LED indicator signals various states and conditions for the heater as follows:

- Illuminates red for 2 seconds when the **OFF** button is pressed, to indicate that the program has stopped.
- Flashes green or red for 2 seconds then stops when the **ON** or **OFF** buttons are pressed, to indicate that no action has been taken.
- Illuminates orange for 2 seconds before showing green or red, to indicate that the remote battery is low.
- Flashes orange for 5 seconds to indicate that no action has been taken and the remote battery should be replaced.

## Additional remotes

Extra remote controls can be programmed to operate the heater. A maximum of 3 remote controls can be programmed to each vehicle. Contact a Dealer/Authorised Repairer to purchase extra remote controls and have them programmed to the vehicle.

## REPLACING THE REMOTE BATTERIES

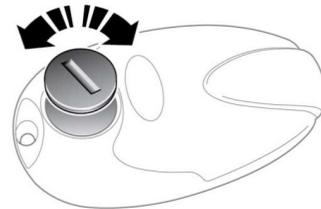

E155971

With the back of the remote control facing upwards, use a coin or a similar implement to rotate the battery cover. Lift the cover off to reveal the battery compartment. Remove the old battery and, making sure the correct polarity is maintained, insert a replacement 3.3 volt, CR1/3N battery. Replace the cover and rotate it to lock.