

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

Maintenance Interval – whichever occurs first (based on expected vehicle display).																				
SERVICE	Miles x 1000					Years					Kilometers x 1000									
	16	32	48	64	80	96	112	128	144	160	1	2	3	4	5	6	7	8	9	10
	26	52	78	104	130	156	182	208	234	260										
Change engine oil and replace filter	●	●	●	●	●	●	●	●	●	●										
VEHICLE INTERIOR																				
Reset the Service Interval Indicator	●	●	●	●	●	●	●	●	●	●								●	●	●
Reset engine oil level indicator	●	●	●	●	●	●	●	●	●	●								●	●	●
Check operation of all lights, warning indicators and horn	●	●	●	●	●	●	●	●	●	●								●	●	●
Check operation of front/rear wiper washer systems	●	●	●	●	●	●	●	●	●	●								●	●	●
Check condition and security of seats and seat belts	●	●	●	●	●	●	●	●	●	●								●	●	●
Replace pollen filter	●	●	●	●	●	●	●	●	●	●								●	●	●
Replace climate controlled seat cushion motor filters (if equipped)	●	●	●	●	●	●	●	●	●	●								●	●	●
VEHICLE EXTERIOR																				
Check condition of wiper blades	●	●	●	●	●	●	●	●	●	●								●	●	●
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks	●	●	●	●	●	●	●	●	●	●								●	●	●
ENGINE COMPARTMENT																				
Check battery condition; check / top up electrolyte level	●	●	●	●	●	●	●	●	●	●								●	●	●
Check / top up fluid levels (brake, coolant, Dynamic Response, windshield washer)	●	●	●	●	●	●	●	●	●	●								●	●	●
Check specific gravity of coolant	●	●	●	●	●	●	●	●	●	●								●	●	●
Check condition of accessory drive belt(s) and, if fitted, supercharger drive belt	●	●	●	●	●	●	●	●	●	●								●	●	●
Change brake fluid: every 3 years	●	●	●	●	●	●	●	●	●	●								●	●	●
Change engine coolant: every 10 years	●	●	●	●	●	●	●	●	●	●								●	●	●
Clean debris from auxiliary oil cooler (supercharged vehicles)	●	●	●	●	●	●	●	●	●	●								●	●	●
Replace spark plugs – 3.0L											Every 96,000 miles									
Replace spark plugs – 5.0L											Every 112,000 miles									
Replace air cleaner element	●	●	●	●	●	●	●	●	●	●								●	●	●

2015 MY Maintenance Schedule

Range Rover

		Maintenance Interval – whichever occurs first (based on expected vehicle display).													
		Miles x 1000 Years		16	32	48	64	80	96	112	128	144	160		
		1	2	3	4	5	6	7	8	9	10				
SERVICE	Kilometers x 1000	26	52	78	104	130	156	182	208	234	260				
ENGINE COMPARTMENT (CONTINUED)															
Replace accessory drive belt: every 10 years															
Replace supercharger drive belt (supercharged vehicles): every 7 years															
VEHICLE UNDERBODY															
NOTE: Remove all road wheels before inspecting brake components.															
Inspect brake pads for wear, calipers for leaks, and discs for condition															
Check operation of electronic parking brake															
Inspect tire pressures, condition, and tread depth															
Inspect exhaust system for leaks, security and damage															
Inspect for fluid leaks															
Inspect condition of driveshafts, suspension, and steering boots/gaeters															
Inspect steering rod ball joint fixings and condition of ball joints, dust covers, and EPAS water drain valve															
Inspect fuel, brake, hydraulic, Dynamic Response, and fluid pipes, hoses and unions															
Inspect electrical harnesses, routing and connections															
Check for free play in all suspension and body mounting bushings															
Lubricate wheel spigot bore with anti-seize compound; install road wheels to opposite side of same axle (except unidirectional tires, which install on same side)															
Replace all flexible brake hoses: every 6 years															
Change transmission fluid and filter															
Change front and rear axle oil (non-locking differential)															
Change transfer box oil; replace drain and fill plugs and washers															
Replace Dynamic Response filter; replace lost fluid															
Conduct road test: select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears															
If fault lamps are illuminated, interrogate with IDS/SDD and report findings															
Check for any outstanding Recalls or Service Actions															