



Maintenance Interval – whichever occurs first (based on expected vehicle display).												
	16	32	48	64	80	96	112	128	144	160		
Miles x 1000												
Years	1	2	3	4	5	6	7	8	9	10		
Kilometers x 1000	26	52	78	104	130	156	182	208	234	260		
<b>SERVICE</b>												
<b>ENGINE COMPARTMENT (CONTINUED)</b>												
Replace accessory drive belt: <b>every 10 years</b>												•
Replace supercharger drive belt (supercharged vehicles): <b>every 7 years</b>							•					
<b>VEHICLE UNDERBODY</b>												
<b>NOTE:</b> Remove all road wheels before inspecting brake components.												
Inspect brake pads for wear, calipers for leaks, and discs for condition	•	•	•	•	•	•	•	•	•	•	•	•
Check operation of electronic parking brake	•	•	•	•	•	•	•	•	•	•	•	•
Inspect tire pressures, condition, and tread depth	•	•	•	•	•	•	•	•	•	•	•	•
Inspect exhaust system for leaks, security and damage		•		•		•		•		•		•
Inspect for fluid leaks		•		•		•		•		•		•
Inspect condition of driveshafts, suspension, and steering boots/gaeters		•		•		•		•		•		•
Inspect steering rod ball joint fixings and condition of ball joints, dust covers, and EPAS water drain valve		•		•		•		•		•		•
Inspect fuel, brake, hydraulic, Dynamic Response, and fluid pipes, hoses and unions		•		•		•		•		•		•
Inspect electrical harnesses, routing and connections		•		•		•		•		•		•
Check for free play in all suspension and body mounting bushings		•		•		•		•		•		•
Lubricate wheel spigot bore with anti-seize compound; install road wheels to opposite side of same axle (except unidirectional tires, which install on same side)	•	•	•	•	•	•	•	•	•	•	•	•
Replace all flexible brake hoses: <b>every 6 years</b>												
Change transmission fluid and filter												
Change front and rear axle oil (non-locking differential)												
Change transfer box oil; replace drain and fill plugs and washers												
Replace Dynamic Response filter; replace lost fluid												
Conduct road test: select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears	•	•	•	•	•	•	•	•	•	•	•	•
If fault lamps are illuminated, interrogate with IDS/SDD and report findings	•	•	•	•	•	•	•	•	•	•	•	•
Check for any outstanding Recalls or Service Actions	•	•	•	•	•	•	•	•	•	•	•	•