

2015 MY Maintenance Schedule

Range Rover Evoque

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).										
		Miles x 1000	10	20	30	40	50	60	70	80	90	100
SERVICE	Years	1	2	3	4	5	6	7	8	9	10	
	Kilometers x 1000	16	32	48	64	80	96	112	128	144	160	
VEHICLE INTERIOR												
Change engine oil and replace filter	●	●	●	●	●	●	●	●	●	●	●	
Reset the Service Interval Indicator	●	●	●	●	●	●	●	●	●	●	●	
Check operation of all lights, warning indicators and horn	●	●	●	●	●	●	●	●	●	●	●	
Check operation of front/ear wiper washer systems	●	●	●	●	●	●	●	●	●	●	●	
Check condition and security of seats and seat belts	●	●	●	●	●	●	●	●	●	●	●	
Replace pollen filter	●	●	●	●	●	●	●	●	●	●	●	
VEHICLE EXTERIOR												
Check condition of wiper blades	●	●	●	●	●	●	●	●	●	●	●	
Check operation of all door checks, hood latch, and fuel flap; lubricate hood catch	●	●	●	●	●	●	●	●	●	●	●	
ENGINE COMPARTMENT												
Check battery condition; check / top up electrolyte level	●	●	●	●	●	●	●	●	●	●	●	
Check / top up fluid levels (brake, coolant, windshield washer)	●	●	●	●	●	●	●	●	●	●	●	
Check specific gravity of coolant	●	●	●	●	●	●	●	●	●	●	●	
Check condition of accessory drive belt	●	●	●	●	●	●	●	●	●	●	●	
Change brake fluid: every 3 years	●	●	●	●	●	●	●	●	●	●	●	
Change engine coolant: every 10 years	●	●	●	●	●	●	●	●	●	●	●	
Replace spark plugs	●	●	●	●	●	●	●	●	●	●	●	
Replace air cleaner element	●	●	●	●	●	●	●	●	●	●	●	
Replace accessory drive belt	●	●	●	●	●	●	●	●	●	●	●	

2015 MY Maintenance Schedule

Range Rover Evoque

		Maintenance Interval – whichever occurs first (based on expected vehicle display).										
SERVICE	VEHICLE UNDERBODY	Miles x 1000	10	20	30	40	50	60	70	80	90	
		Years	1	2	3	4	5	6	7	8	9	
		Kilometers x 1000	16	32	48	64	80	96	112	128	144	160
NOTE:	Remove all road wheels before inspecting brake components.											
	Inspect brake pads for wear, calipers for leaks, and discs for condition	●	●	●	●	●	●	●	●	●	●	
	Check operation of electronic parking brake	●	●	●	●	●	●	●	●	●	●	
	Inspect tire pressures, condition, and tread depth	●	●	●	●	●	●	●	●	●	●	
	Inspect exhaust system for leaks, security and damage	●	●	●	●	●	●	●	●	●	●	
	Inspect for fluid leaks	●	●	●	●	●	●	●	●	●	●	
	Inspect condition of driveshafts, suspension, and steering boots/gaiters	●	●	●	●	●	●	●	●	●	●	
	Check for free play in all suspension mounting bushings	●	●	●	●	●	●	●	●	●	●	
	Inspect fuel, brake, hydraulic and fluid pipes, hoses and unions	●	●	●	●	●	●	●	●	●	●	
	Inspect electrical harnesses, routing and connections	●	●	●	●	●	●	●	●	●	●	
	Lubricate wheel spigot bore with anti-seize compound	●	●	●	●	●	●	●	●	●	●	
	Install road wheels	●	●	●	●	●	●	●	●	●	●	
	Replace all flexible brake hoses; every 6 years						●	●	●	●	●	
	Change transmission fluid							Every 10 years				
	Conduct road test							●	●	●	●	
	If fault lamps are illuminated, interrogate with IDS/SDD and report findings							●	●	●	●	
	Check for any outstanding Recalls or Service Actions							●	●	●	●	