

Maintenance Interval – whichever occurs first (based on expected vehicle display).												
	Miles x 1000			Years			Kilometers x 1000					
	10	20	30	40	50	60	70	80	90	100		
SERVICE	1	2	3	4	5	6	7	8	9	10		
	16	32	48	64	80	96	112	128	144	160		
VEHICLE UNDERBODY												
NOTE: Remove all road wheels before inspecting brake components.												
Inspect brake pads for wear, calipers for leaks, and discs for condition	•	•	•	•	•	•	•	•	•	•	•	•
Check operation of electronic parking brake	•	•	•	•	•	•	•	•	•	•	•	•
Inspect tire pressures, condition, and tread depth	•	•	•	•	•	•	•	•	•	•	•	•
Inspect exhaust system for leaks, security and damage	•	•	•	•	•	•	•	•	•	•	•	•
Inspect for fluid leaks	•	•	•	•	•	•	•	•	•	•	•	•
Inspect condition of driveshafts, suspension, and steering boots/gaeters	•	•	•	•	•	•	•	•	•	•	•	•
Check for free play in all suspension mounting bushings	•	•	•	•	•	•	•	•	•	•	•	•
Inspect fuel, brake, hydraulic and fluid pipes, hoses and unions	•	•	•	•	•	•	•	•	•	•	•	•
Inspect electrical harnesses, routing and connections	•	•	•	•	•	•	•	•	•	•	•	•
Lubricate wheel spigot bore with anti-seize compound	•	•	•	•	•	•	•	•	•	•	•	•
Install road wheels	•	•	•	•	•	•	•	•	•	•	•	•
Replace all flexible brake hoses: every 6 years						•						
Change transmission fluid												
Conduct road test	•	•	•	•	•	•	•	•	•	•	•	•
If fault lamps are illuminated, interrogate with IDS/SDD and report findings	•	•	•	•	•	•	•	•	•	•	•	•
Check for any outstanding Recalls or Service Actions	•	•	•	•	•	•	•	•	•	•	•	•