

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

	Maintenance Interval – whichever occurs first (based on expected vehicle display).														
	Miles x 1000			Years			Kilometers x 1000								
	10	20	30	40	50	60	70	80	90	100					
SERVICE	1	2	3	4	5	6	7	8	9	10					
Change engine oil and replace filter	16	32	48	64	80	96	112	128	144	160					
VEHICLE INTERIOR															
Reset the Service Interval Indicator	•	•	•	•	•	•	•	•	•	•					
Check operation of all lights, warning indicators and horn	•	•	•	•	•	•	•	•	•	•					
Check operation of front/rear wiper washer systems	•	•	•	•	•	•	•	•	•	•					
Check condition and security of seats and seat belts	•	•	•	•	•	•	•	•	•	•					
Replace pollen filter	•	•	•	•	•	•	•	•	•	•					
VEHICLE EXTERIOR															
Check condition of wiper blades	•	•	•	•	•	•	•	•	•	•					
Check operation of all door checks, hood latch, and fuel flap; lubricate hood catch	•	•	•	•	•	•	•	•	•	•					
ENGINE COMPARTMENT															
Check battery condition; check / top up electrolyte level	•	•	•	•	•	•	•	•	•	•					
Check / top up fluid levels (brake, coolant, windshield washer)	•	•	•	•	•	•	•	•	•	•					
Check specific gravity of coolant	•	•	•	•	•	•	•	•	•	•					
Check condition of accessory drive belt	•	•	•	•	•	•	•	•	•	•					
Change brake fluid: every 3 years	•	•	•	•	•	•	•	•	•	•					
Change engine coolant: every 10 years	•	•	•	•	•	•	•	•	•	•					
Replace spark plugs	Every 110,000 miles														
Replace air cleaner element	•	•	•	•	•	•	•	•	•	•					
Replace accessory drive belt	Every 9 years or 120,000 miles														

		Maintenance Interval – whichever occurs first (based on expected vehicle display).													
SERVICE		Miles x 1000													
		10	20	30	40	50	60	70	80	90	100				
		1	2	3	4	5	6	7	8	9	10				
	Kilometers x 1000	16	32	48	64	80	96	112	128	144	160				
VEHICLE UNDERBODY															
NOTE: Remove all road wheels before inspecting brake components.															
Inspect brake pads for wear, calipers for leaks, and discs for condition		•	•	•	•	•	•	•	•	•	•				
Check operation of electronic parking brake		•	•	•	•	•	•	•	•	•	•				
Inspect tire pressures, condition, and tread depth		•	•	•	•	•	•	•	•	•	•				
Inspect exhaust system for leaks, security and damage		•	•	•	•	•	•	•	•	•	•				
Inspect for fluid leaks		•	•	•	•	•	•	•	•	•	•				
Inspect condition of driveshafts, suspension, and steering boots/gaeters		•	•	•	•	•	•	•	•	•	•				
Check for free play in all suspension mounting bushings		•	•	•	•	•	•	•	•	•	•				
Inspect fuel, brake, hydraulic and fluid pipes, hoses and unions		•	•	•	•	•	•	•	•	•	•				
Inspect electrical harnesses, routing and connections		•	•	•	•	•	•	•	•	•	•				
Lubricate wheel spigot bore with anti-seize compound		•	•	•	•	•	•	•	•	•	•				
Install road wheels		•	•	•	•	•	•	•	•	•	•				
Replace all flexible brake hoses: every 6 years							•								
Change transmission fluid												Every 10 years			
Conduct road test		•	•	•	•	•	•	•	•	•	•				
If fault lamps are illuminated, interrogate with IDS/SDD and report findings		•	•	•	•	•	•	•	•	•	•				
Check for any outstanding Recalls or Service Actions		•	•	•	•	•	•	•	•	•	•				