
Tires

TIRE INFORMATION LABELS

Tire pressure label/placard (USA only)

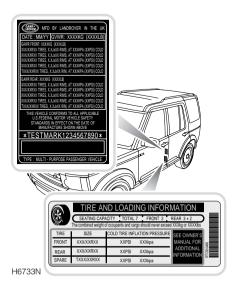

Two tire information labels are visible on the pillar behind the driver's door (known as the $\bf B$ pillar), giving information specific to the wheel and tire equipment fitted to the vehicle when it was built

The top label contains information relating to tire and wheel sizes and recommended pressures for all wheel and tire combinations

The lower label contains the following information:

- The maximum number of occupants (1), divided between the front (2) and rear (3) of the vehicle.
- The vehicle capacity weight (4), which includes the weight of the driver, passengers and cargo.
- The size of the tires (5) with which the vehicle was originally equipped, including the compact spare (6).
- Cold inflation pressures for the front and rear tires (7), and compact spare tire (8).

Note: The label must not be changed, even if different wheels are fitted at a later stage.

