


## ACTIVE EXHAUST

The Active exhaust feature allows the driver to change the volume and tone of the exhaust system. When starting the engine, one of three Active exhaust settings are available: **Normal**, **Quiet**, and **Dynamic**.

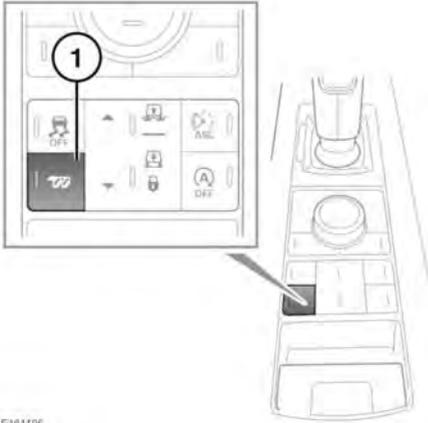

E164496

- **Dynamic:** To start the engine in the Dynamic setting, switch the vehicle's ignition on. Press the Active exhaust button (1), located on the centre console. The button LED illuminates to confirm that the Dynamic setting is selected. Start the engine. The Active exhaust system will now run in the Dynamic setting.  
**Note:** The Active exhaust feature is reset to the Normal setting at the start of each ignition cycle.  
**Note:** When the vehicle is being driven in Dynamic mode, the Active exhaust's Dynamic setting is automatically activated.  
The Active exhaust's Dynamic setting can be manually selected when driving, by pressing the button located on the centre console. When selected, the button LED illuminates to confirm that the Dynamic setting is selected. To return to the Normal setting, press the button again. The button LED extinguishes to confirm that the system has returned to the Normal setting.
- **Normal:** If the engine is started immediately after the vehicle's ignition is switched on, the Active exhaust system operates in the Dynamic setting for a few seconds. In the Dynamic setting, the exhaust system emits a richer and louder sound. After a few seconds, the Active exhaust system automatically moves to the Quiet setting.
- **Quiet:** To start the engine in the Quiet setting, switch the vehicle's ignition on and wait for 5 seconds. After 5 seconds, start the engine. The Active exhaust system will now run in the Quiet setting.