

**Note:** If a trailer is connected to a Jaguar Land Rover approved trailer socket, the Park assist system will be disabled.

- It encounters an obstruction that is thin or wedge shaped.
- It encounters an obstruction that is elevated and/or protruding, such as ledges or tree branches.
- It encounters an obstruction with corners and sharp edges.

## PARK ASSIST TROUBLESHOOTING

**Park assist is not searching for a parking space:**

- The system may not be activated.
- The vehicle may be travelling above 30 km/h (18 mph).
- The sensors may be covered or partly obscured by dirt, mud, ice, or snow.

**Park assist does not offer a certain parking space:**

- The sensors may be covered or partly obscured by dirt, mud, ice, or snow.
- The space may not be large enough, or there may not be enough space on the opposite side of the vehicle, for the front to swing out during the manoeuvre.
- The vehicle may have been driven more than 1.5 m from the row of parked vehicles.
- The vehicle may have been driven within 41 cm to the row of parked vehicles.
- The vehicle may have been driven in reverse. Park assist searches for a parking space only when the vehicle is in Drive (D).
- The approach angle may not be suitable.

**Park assist has not positioned the vehicle accurately within the space:**

- One or more of the system limitations criteria may have been met. See **152, PARK ASSIST LIMITATIONS**.