


REAR MEDIA HEADPHONES

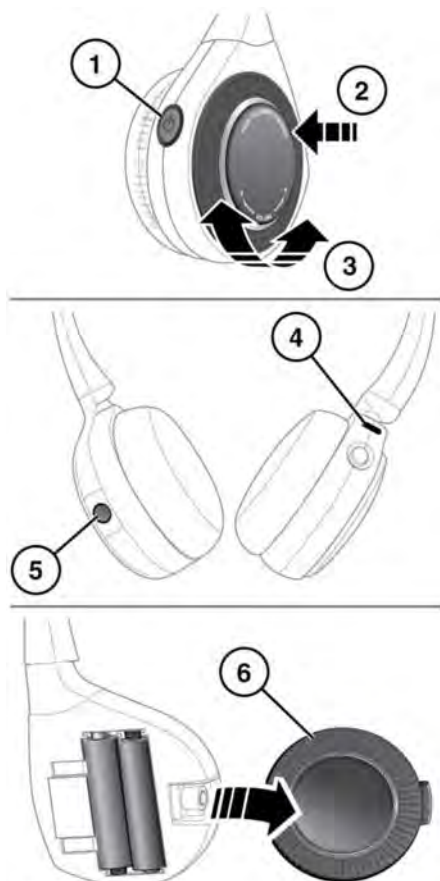

E170840

1. Press to switch the headphones on/off.
 2. Press to change the audio channel.
 3. Rotate to adjust the headphone volume.
 4. The status LED indicator lamp:
 - When a signal is being received, the lamp will illuminate continuously.
 - When a signal is not being received, the lamp will flash.
 - When the battery power is low, the lamp will flash and then go out after a short delay.
 5. The battery cover retaining screw.
 6. The battery access cover.
- When the battery power is low, the headphones will emit a beeping sound every 90 seconds.
- To replace the batteries, use the following procedure:
1. Remove the battery access cover retaining screw (5).
 2. Pull the cover (6) away from the headphones.
 3. Install the new AAA batteries.
- Note:** Make sure that the polarity of the batteries matches that shown inside the headphone's battery compartment.
4. Replace the battery access cover.
- Note:** The headphones will not operate if the batteries are fitted incorrectly.
- Note:** Under normal usage, the expected battery life is 6 months.
- Note:** Always use good quality batteries of the same type.



Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on battery disposal from a Retailer/Authorised Repairer and/or the local authority.