


## PORTABLE MEDIA CONTROLS

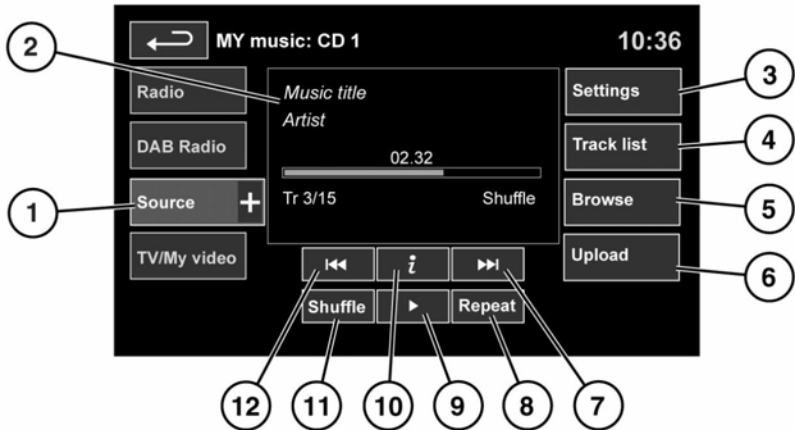

E155698

**⚠** Do not adjust the main Media system's controls, or allow the system to distract the driver while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

**⚠** Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

**Note:** Some electronic equipment being used within the vehicle, or within close proximity to the vehicle, may affect the performance of this system (e.g., charging a device, etc.).

Press the Media menu button, or touch the Media menu soft key from the Touch screen **Home** menu and then select the **My music** soft key. See **84, TOUCH SCREEN HOME MENU** and also see **175, AUDIO/VIDEO CONTROLS**.

**My music** includes CD, iPod, USB, AUX and **Bluetooth®** wireless technology devices. The full infotainment system also includes a **Stored CD** menu.

**Note:** iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

1. Touch the **Source** soft key to display and select an option.
 

**Note:** The sound quality and volume levels, available from devices connected to the auxiliary input, may vary widely.
2. A display of information about the current track, including elapsed run-time. Some of this information is also displayed in the Instrument panel.
 

**Note:** Only connected devices, that support ID3, shall have the information displayed.

**3. Settings:** Select to switch traffic and news announcements on or off. Additionally, for MP3 recorded media, you can select the number of list entries that are skipped, when you use the page up/down arrows when navigating a list.

**4. Track list:** Select to view the current CD or the **Stored CD** menu track list. Select a track to start playback.

**5. Browse:** (iPod, USB, and the **Stored CD** menu files).

- Select to view the contents of the connected device, which are displayed as dictated by the file structure.
- Select a file to start playback (Browse view will remain). Select a folder or subfolder to view their contents.
- To return to the Controls menu, select the Back soft key.

**Note:** *If the iPhone is connected via a USB cable, so that audio can be played or for phone charging, Bluetooth wireless technology devices audio is disconnected.*

**6. Upload:** Applicable to the **Stored CD** menu only.

Select to view and manage the CDs loaded onto the CD store.

- Select **Upload**, alongside an empty slot, to upload the current CD. There are 10 slots available.
- If the CD store is full, select **Replace** to overwrite an existing CD.

In each case, a confirmation pop-up will appear. Select **Yes** to continue.

**Note:** *Loading time is dependent on the content type. A % count up is displayed. Other features can be selected while the upload is in progress.*

**7. Skip/Scan forward:**

- Touch and release to skip to the next track.
- Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.

**8. Repeat, in CD mode:**

- Touch and release to repeat the current track continuously until Repeat mode is cancelled. **Repeat track** is displayed.
- Touch and release again to repeat the current Stored CD (or folder for MP3 discs) continuously until Repeat mode is cancelled. **Repeat disc** or **Repeat folder** is displayed.
- Touch and release a third time to cancel Repeat mode.

**Note:** *Selecting Shuffle will cancel Repeat mode, but Repeat track can be selected while Shuffle mode is active (this cancels the previously selected Shuffle mode).*

**Repeat, in USB or iPod mode:**

- Select to repeat the current track.
- Select again to repeat the current folder (USB), or to cancel Repeat mode (iPod). Select again to cancel Repeat mode for USB devices.

**Note:** *Repeat mode is not available for Bluetooth wireless technology devices.*

**Note:** *Selecting Shuffle will cancel Repeat mode.*