

3. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
4. Touch **OK**. The screen will display the activation time. If required, set the time for the other timer using the same process.
5. Once set, the timer events can be switched on or off, as required, in the Timed climate screen, by selecting the 7 day timer or the single event soft key.


Note: Set times should to be programmed 20 minutes before the planned journey.

Note: The time format, 12/24 hour clock, is determined by the time settings currently selected in the Instrument panel menu, see **53, INSTRUMENT PANEL MENU**.

Note: Timed climate will only operate once between engine starts. For example, a remote timed climate request will not be performed if a programmed timed climate event has already occurred.

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled, by touching the relevant power soft key on the timer set up menu or the **Power** soft key on the **Timed Climate** information home menu.

USING THE TIMED CLIMATE REMOTE

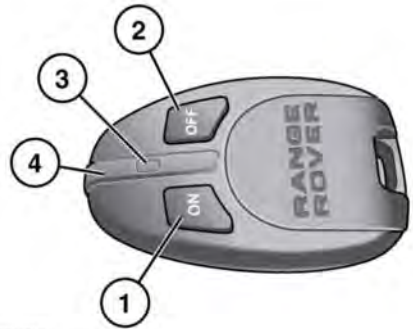

E144900

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

Note: Avoid touching the antenna when operating the **ON** or **OFF** button.

The remote control has an approximate range of 100 metres. There is no need to point the remote control at the vehicle.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate green to confirm that a remote Timed climate program has been initiated. The LED continues to flash for a few seconds to indicate that the heater is active.

The remote Timed climate program will continue for 20-30 minutes, after which it switches off automatically to prevent the vehicle's battery from discharging. It also switches off automatically if the engine is started.