

# Starting the engine

Manually adjusted steering column:  
Position the Smart key flat against the underside of the steering column.

**Note:** *There are markings on the steering column to help locate the correct position.*

- While holding the Smart key in position, firmly press and hold the brake pedal.
- Press and release the engine **START/STOP** button.

Once the engine starts, release the brake pedal, if it is safe to do so.

If the Smart key is not recognised, or the engine fails to start, consult a Retailer/Authorised Repairer.

## IF THE ENGINE FAILS TO START

### All vehicles



**If the engine fails to start when the engine START/STOP button is pressed, and the vehicle has been in a recent collision, seek qualified assistance.**

If the engine fails to start, and a valid Smart key is inside the vehicle, a check must be made to determine the cause. To do this:

1. Switch on the vehicle's ignition. See **120, SWITCHING ON THE IGNITION.**
2. Check the Instrument panel for any illuminated warning lamps, and the Message centre for warning messages. Seek qualified assistance, if necessary. See **58, WARNING LAMPS AND INDICATORS** and **54, WARNING AND INFORMATION MESSAGES.**
3. Switch off the vehicle's ignition.

Alternatively, if the engine fails to start, the alarm system may need to be reset. To reset the alarm system, lock and unlock the vehicle. See **5, UNLOCKING THE VEHICLE.**

If the engine still fails to start, consult a Retailer/Authorised Repairer.

### Petrol vehicles only

If the engine persistently fails to start, carry out the following steps:

1. Make sure that a valid Smart key is inside the vehicle.
2. Make sure that Park (**P**) or Neutral (**N**) is selected.
3. Press and hold the engine **START/STOP** button until the warning lamps in the Instrument panel illuminate.
4. Firmly press the brake pedal.
5. Slowly press the accelerator pedal, and hold it in the fully pressed position.
6. Press and release the engine **START/STOP** button. The engine will begin to crank.
7. Release the accelerator pedal when the engine starts.

Once the engine starts, release the brake pedal, if it is safe to do so.

If the engine still fails to start, consult a Retailer/Authorised Repairer.