

# Warning lamps

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## AIRBAG (AMBER)



Illuminates as a bulb check, when the ignition is switched on, and extinguishes after 6 seconds.

If the lamp illuminates again, after the bulb check or when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

## AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when the Automatic Speed Limiter (ASL) is active.

## BRAKE (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

## DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, it will remain illuminated and the Message centre will display **DSC NOT AVAILABLE**. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will sound and a confirmation message will be displayed in the Message centre.

## ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on. If the lamp illuminates when the engine is running, there is an emissions related fault with the engine or transmission.