

7. Rear fog lamps: Will operate only while side lamps, headlamps or Auto lamps are selected. Turn the collar towards the steering wheel and release. The Instrument panel warning lamp will illuminate. See **61, REAR FOG LAMP (AMBER)**.

To switch off the rear fog lamps: Turn the collar towards the steering wheel again and release.

In the event of a bulb failure, it should be noted that some bulbs are renewable only by a Retailer/Authorised Repairer. See **258, CHANGING A BULB**.

DAYTIME RUNNING LAMPS

With the lighting control in the **OFF** position, Daytime running lamps will switch on automatically under the following conditions:

- The engine is running.
- The gear selector is not in Park (**P**).
- The Electric Parking Brake (EPB) is not applied (released) - market dependent.
- Auto lamps are selected and high ambient light levels are detected.



Unless required or prohibited by law, Daytime running lamps can be disabled or enabled by a Retailer/Authorised Repairer.

HEADLAMP COURTESY DELAY

This feature operates whenever the lighting control is in the auto position and the ignition is switched off. The headlamps will remain illuminated for up to 240 seconds.

Note: The time delay may be changed via the **Vehicle Set-Up** menu. See **53, INSTRUMENT PANEL MENU**.

The Courtesy delay can be switched off at any time, by pressing the headlamp button on the Smart key.

AUTO HIGH BEAM

This feature automatically selects and deselects the high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is only active when the ambient light drops below a predetermined level.

Note: It is not recommended that Auto high beam is used while driving off road.

For Auto high beam to become operational, the lighting control must be in the **AUTO (5)** position, with dipped beam headlamps selected.

The Instrument panel warning lamp illuminates when Auto high beam is selected. See **62, AUTO HIGH BEAM (GREEN)**.

Auto high beam will only activate when the vehicle's speed exceeds 40 km/h (25 mph). The system will deactivate when the vehicle's speed drops below 24 km/h (15 mph).

To manually select high beam, move the lighting control to the high beam position as normal. To return to Auto high beam, move the lighting control back to the central position.

To manually override to dipped beam from high beam, pull the lighting control to the flash position (**2**) and Auto high beam will be cancelled. To return to Auto high beam, push the lighting control to the high beam position (**1**) and then return it to the central position.

To switch Auto high beam off, turn the lighting control from **AUTO** to headlamps.