


10. **CLIMATE** button: Shortcut to the Touch screen Front climate menu.
11. Temperature controls: For individual driver/passenger settings.
12. Press to switch between seat temperature control and cabin temperature control.

Note: *The Climate seats can also be controlled on the Touch screen, see 90, CLIMATE SEATS.*

- Vehicles with Heated seats: Rotate the temperature control dial (11) clockwise to increase the seat temperature. Rotate the dial counter-clockwise to reduce the seat temperature or switch off the Heated seat.
- Vehicles with Climate seats: Rotate the temperature control dial (11) clockwise to increase the seat temperature. Rotate the dial counter-clockwise to reduce the seat temperature.

Note: *The Climate seat can be switched off by selecting the central temperature setting.*

13. Maximum defrost program.
 14. Maximum Air Conditioning (A/C) program.
 15. Heated windscreen: The heated windscreen activates for a predetermined length of time.
 16. Heated rear screen: The heated rear screen activates for a predetermined length of time.
-  Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.
17. Air Conditioning (A/C).

18. Air recirculation: Press for timed air recirculation. Press and hold for latched (continuous) air recirculation. To cancel air recirculation, press the button again.

Note: *Prolonged use at low temperatures may cause the windows to mist.*

19. Blower speed control: In manual mode, the current speed selection is indicated in the integrated screen on the blower speed control. To switch Climate control off, rotate fully counter-clockwise, stop and then rotate counter-clockwise again.

Note: *An indicator lamp in the switch illuminates when the function is selected.*

Note: *To help keep the windows clear of ice, close the centre face-level vent and direct air flow from the outer face-level vents towards the side windows.*

Note: *The Climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and no cause for concern.*

Timed climate controls the optional Auxiliary heater and can be set from the **Extra features** menu. See 92, **SETTING TIMED CLIMATE**.

AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the Climate control system monitors exterior air pollution and selects recirculation if it reaches a predetermined level. This feature only operates when selected from the **Settings** menu. Recirculation sensitivity can also be changed in the **Settings** menu. See 90, **AIR QUALITY SENSOR**.