


- 10. **CLIMATE** button: Shortcut to the Touch screen Front climate menu.
- 11. Temperature controls: For individual driver/passenger settings.
- 12. Press to switch between seat temperature control and cabin temperature control.

Note: The Climate seats can also be controlled on the Touch screen, see **90, CLIMATE SEATS**.

- Vehicles with Heated seats: Rotate the temperature control dial (**11**) clockwise to increase the seat temperature. Rotate the dial counter-clockwise to reduce the seat temperature or switch off the Heated seat.
- Vehicles with Climate seats: Rotate the temperature control dial (**11**) clockwise to increase the seat temperature. Rotate the dial counter-clockwise to reduce the seat temperature.

Note: The Climate seat can be switched off by selecting the central temperature setting.

- 13. Maximum defrost program.
 - 14. Maximum Air Conditioning (A/C) program.
 - 15. Heated windscreen: The heated windscreen activates for a predetermined length of time.
 - 16. Heated rear screen: The heated rear screen activates for a predetermined length of time.
-  Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.
- 17. Air Conditioning (A/C).

- 18. Air recirculation: Press for timed air recirculation. Press and hold for latched (continuous) air recirculation. To cancel air recirculation, press the button again.

Note: Prolonged use at low temperatures may cause the windows to mist.

- 19. Blower speed control: In manual mode, the current speed selection is indicated in the integrated screen on the blower speed control. To switch Climate control off, rotate fully counter-clockwise, stop and then rotate counter-clockwise again.

Note: An indicator lamp in the switch illuminates when the function is selected.

Note: To help keep the windows clear of ice, close the centre face-level vent and direct air flow from the outer face-level vents towards the side windows.

Note: The Climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and no cause for concern.

Timed climate controls the optional Auxiliary heater and can be set from the **Extra features** menu. See **92, SETTING TIMED CLIMATE**.

AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the Climate control system monitors exterior air pollution and selects recirculation if it reaches a predetermined level. This feature only operates when selected from the **Settings** menu. Recirculation sensitivity can also be changed in the **Settings** menu. See **90, AIR QUALITY SENSOR**.