

## CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the Message centre.

## ENGINE TEMPERATURE (RED)



Illuminates when the engine temperature is too high. The Message centre will also display the message **ENGINE OVERHEATING**.

Stop the vehicle as soon as safety permits and seek qualified assistance before continuing.

## HYBRID SYSTEM BATTERY FAULT (RED)



Illuminates if the Hybrid high voltage system is unable to shut down, and is accompanied by a warning message in the Message centre.

## LANE DEPARTURE WARNING (RED)



If the Lane Departure Warning (LDW) system detects that the vehicle has crossed either of the lane markings that it is travelling within, without activation of the appropriate direction indicator, then the relevant lane will illuminate red. This will also be accompanied by a vibration felt through the steering wheel.

## LOW OIL PRESSURE (RED)



If the lamp flashes or illuminates while driving, stop the vehicle as soon as safety permits and switch off the engine immediately.

Check and top up the oil level, if necessary. Start the engine; if the lamp remains illuminated, switch the engine off immediately and seek qualified assistance before continuing.

## PARKING BRAKE (RED)



Illuminates when the Electric Parking Brake (EPB) is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt is buckled.

**Note:** *Objects on the front passenger seat may activate the Seat belt reminder feature. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See 33, USING THE SEAT BELTS.*