

Note: Some languages are not yet available for both the System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.

Volume presets: Adjust the volume for the available system's announcements (e.g., Parking aid, Phone, Voice, etc.).

SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the loadspace. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

To select Valet mode:

1. From the **Home menu** screen, select **Valet**.
2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed to indicate that a PIN has been accepted.

The loadspace is now securely locked in Valet mode and the **Valet mode On** screen is displayed.

DESELECTING VALET MODE

To deselect Valet mode:

1. When you re-enter the vehicle, select **Valet**.

2. Enter your memorable 4 digit PIN and touch the **OK** button.

Valet mode deactivated is displayed, to indicate that a PIN has been accepted.

- The loadspace will return to the previously set security requirement.
- The Touch screen will be enabled.

Note: If the PIN is forgotten, Valet mode can only be deactivated by a Retailer/ Authorised Repairer.

EXTRA FEATURES

Note: The amount of available extra features is dependent on the vehicle's specification.

From the **Home menu** screen, navigate to the right to display the **Extra features** screen. This menu allows the vehicle's Extra features to be displayed for adjustment, switching on/off, or for information.