




When jacking the vehicle make sure that all precautions are taken to prevent vehicle movement. It is recommended that the wheels of the vehicle be chocked.

TOOL KIT

Note: Tool types and positions may vary from the illustration.

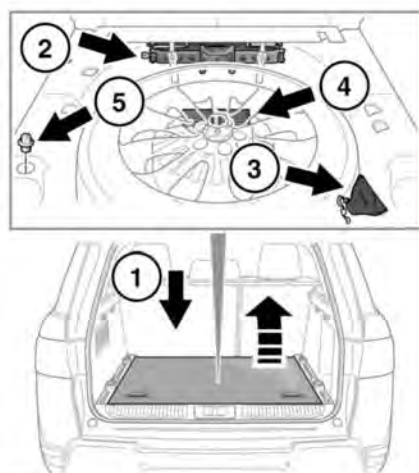

E151140

1. Loadspace floor panel.
2. Jack.
3. Spare wheel assist lift tool.
4. Tool kit - located under the spare wheel. See 313, REMOVING THE SPARE WHEEL

5. Locking wheel nut adaptor.

Note: Examine the jack occasionally; clean and grease the moving parts, particularly the screw thread, to prevent corrosion.

Note: Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.

REMOVING THE SPARE WHEEL



Remove the spare wheel before jacking the vehicle, to avoid destabilising the vehicle when raised.



Wheels are heavy and if handled incorrectly may cause injury. Use extreme caution when lifting, lowering and manoeuvring the wheels.



Always secure the spare wheel, or the removed wheel, in the correct position using the retaining bolt.



Do not stow the wheel while the vehicle is raised on the jack.



After wheel changing, always secure tools, jack and the replaced wheel in their correct stowage positions. Such objects, if not properly stowed, can become flying missiles in a crash or rollover, potentially causing injury or death.