


-  When jacking the vehicle make sure that all precautions are taken to prevent vehicle movement. It is recommended that the wheels of the vehicle be chocked.

## TOOL KIT

**Note:** Tool types and positions may vary from the illustration.

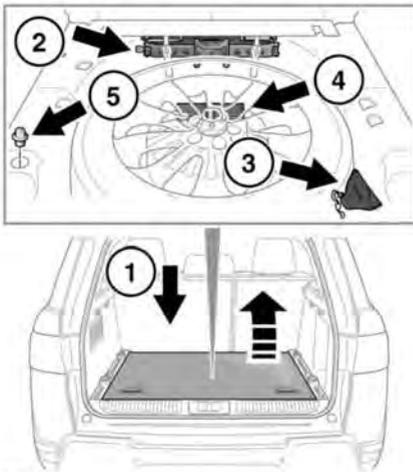

E151140

1. Loadspace floor panel.
2. Jack.
3. Spare wheel assist lift tool.
4. Tool kit - located under the spare wheel. See 313, REMOVING THE SPARE WHEEL

5. Locking wheel nut adaptor.

**Note:** Examine the jack occasionally; clean and grease the moving parts, particularly the screw thread, to prevent corrosion.

**Note:** Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.

## REMOVING THE SPARE WHEEL

-  Remove the spare wheel before jacking the vehicle, to avoid destabilising the vehicle when raised.
-  Wheels are heavy and if handled incorrectly may cause injury. Use extreme caution when lifting, lowering and manoeuvring the wheels.
-  Always secure the spare wheel, or the removed wheel, in the correct position using the retaining bolt.
-  Do not stow the wheel while the vehicle is raised on the jack.
-  After wheel changing, always secure tools, jack and the replaced wheel in their correct stowage positions. Such objects, if not properly stowed, can become flying missiles in a crash or rollover, potentially causing injury or death.