

- Select **Balance/Fade**, followed by the direction arrows to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

To adjust the surround sound settings:

1. If **Meridian Surround** is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield** or select **Stereo** to switch the surround sound off.
2. If **Meridian Signature Reference** is fitted, select **3D surround** and touch **DPLIIz**, **DTS**, **Neo:X** or **Meridian Trifield 3D** to activate 3D surround mode.

Note: Surround sound options are not available for certain sources where the surround sound mode is set automatically.

CONVERSATION ASSIST

Conversation assist uses the vehicle's Media system and the front and rear microphones to enhance the conversation over the vehicle's interior noise.

The Conversation assist controls can be found in the Touch screen **Setup** menu. See **86, TOUCH SCREEN SETUP**.

Conversation assist offers 3 options:

- **Off:** Touch to switch the system off.
- **Normal:** Touch to select normal volume.
- **High:** Touch to select high volume.

When active, the front passenger voices are reproduced through the rear speakers and the rear passengers voices are reproduced through the front speakers. The system is disabled when the vehicle is at a standstill and progressively increases with vehicle speed and background noise.

Note: The system is disabled when at standstill, during phone calls, or at higher volumes, for example, when loud music is playing.

LOADING DISCS

- ⚠ To prevent CD mechanism damage, do not insert any object other than a CD/DVD into the disc slot. Objects, such as coins, tickets and cards, will cause a mechanism error and permanent damage to the device.
- ⚠ Do not force the disc into the slot.
- ⚠ Do not use irregular shaped CDs or DVDs, and those with a scratch protection film or self-adhesive label attached.
- ⚠ Do not use mini sized CDs, even with an adaptor.
- ⚠ Recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.
- ⚠ Recordable (DVD-R or DVD+R) discs may not function correctly.
- ⚠ Dual format and dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and so playback cannot be guaranteed and jamming may occur.

Only use an approved CD cleaning kit.

Only use high quality 12 cm circular discs.