

5. To separate the bulb holder from the electrical connector, first push up the connector lock.
6. Push in the release mechanism while pulling the connector and bulb holder apart.

Note: Inside the bulb holder, there are three locating lugs. When fitting the new bulb unit, the lugs must line up with the connector correctly.

Refitting is a reverse of the removal process. Make sure the connector lock is pressed down and that the bulb unit locates securely into the fog lamp housing.

WIPERS SERVICE POSITION



To avoid damage to the bonnet, do not lift the wiper blades when they are in the normal parked position.

Before changing a front wiper blade, the wiper arms must be set to the Winter park position. See **71, WINTER PARK POSITION**.

Note: The Smart key must remain in the vehicle while the wiper blades are replaced.

Note: Fit only replacement wiper blades that are identical to the original specification.

Note: Replace the wiper blades in accordance with manufacturer's instructions.

WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged, or power supply is interrupted.

Reset as follows:

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for 1 second.
3. Repeat the procedure on each window.

SUNROOF RESET

If the battery is disconnected or the power supply is interrupted while the sunroof is partially open, it may need to be recalibrated.

Once the battery is reconnected or the power supply is restored, recalibrate the sunroof as follows:

1. Switch the ignition on.
2. With the roof and blind closed, press the front of the roof switch and hold for 20 seconds. See **81, ELECTRIC WINDOWS**.
3. After 20 seconds, the sunroof will begin to move. Release the switch. Within 5 seconds, press and hold the front of the roof switch until the blind and roof complete a full open/close cycle.
4. Once the blind has stopped moving, release the switch.

Note: The blind will open first and close last.

The sunroof can now be operated as normal.

FIRE EXTINGUISHER

For certain markets, fire extinguishers are fitted to comply with local legislation. Please note it is the owner's responsibility to make sure the fire extinguisher is maintained in accordance with the manufacturer's instructions.

It is also the responsibility of the owner to make sure the pressure is at a suitable operating pressure as indicated on the pressure gauge. Use only Land Rover approved fire extinguishers.