

SERVICE INTERVAL INDICATOR


An upcoming service interval will be notified to the driver via the Message centre, as either a distance or time left until the service is due. Once the distance or time are exceeded, the display will show a negative (-) value to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.

Details of the next service can be found in the Instrument panel menu. See **53, INSTRUMENT PANEL MENU**.

HEAD UP DISPLAY

The Head-Up Display (HUD) feature projects driver information onto the inside of the windscreen.

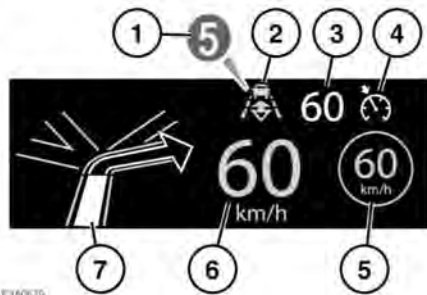

The information displayed is as follows:

1. Current gear selected.
2. Follow mode is active. See **159, ENTERING FOLLOW MODE**.
3. Cruise control set speed.
4. Cruise control or Adaptive Cruise Control (ACC) is active.
5. Traffic sign recognition, identified speed limit. See **143, TRAFFIC SIGN RECOGNITION**.

6. Current vehicle speed.
7. Turn-by-turn navigation instructions.

The HUD can be controlled from the **Head-Up Display (HUD)** option in the Instrument panel menu. For more information, see **53, INSTRUMENT PANEL MENU**.

Once selected, the menu offers a number of options, including:

- Switching the HUD on/off.
- Selecting which information is displayed on the inside of the windscreen.
- The position of the display.
- The brightness of the display.

It is important that the position of the display is set correctly. The correct position is dependent on a number of conditions, including the height of the driver and the seat position.

Note: Before setting the position of the HUD, make sure that the driver's seat is correctly positioned. See **22, SITTING IN THE CORRECT POSITION**. The HUD level should be set horizontally, within the driver's vision.

To set the display position, select **Position** from the **Head-Up Display (HUD)** menu and follow the on-screen instructions. Use the driver's seat memory store button (**M**) to store your preferences. See **23, SEAT POSITION MEMORY**.

The brightness of the display is set automatically to suit the ambient light conditions. Brightness can be manually adjusted to your preferred level by selecting **Brightness** from the **Head-Up Display (HUD)** menu. Follow the on-screen instructions and then press **OK** to confirm.

The HUD is linked to the Trip computer units settings. If fuel economy is set to mpg, the HUD will be in miles. If fuel economy is set to km/l, the HUD will be in kilometres. See **55, METRIC/IMPERIAL/MIXED DISPLAY**.

Note: *In extreme temperatures, the HUD takes a longer time to display from start-up. This is to make sure that the HUD always runs at its optimum temperature.*

Note: *It may not be possible to see the full HUD image, while wearing polarised sunglasses.*

Note: *Do not place anything over the HUD unit, which is positioned above the Instrument panel, next to the windscreen.*

If cleaning is required, see **270, CLEANING SCREENS AND DISPLAYS** and follow the same cleaning instructions.