

To operate the remote device, press and hold the programmed memory button on the RF transceiver for 2 seconds. If the LED illuminates continuously, the RF transceiver has been programmed successfully, and the remote device will operate.

**Note:** You may need to press the button on the RF transceiver up to 3 times.

If the remote device does not operate, and the LED flashes quickly, further programming will be required.

These additional programming steps may require assistance from another person.

1. Locate the **smart/learn program** button on the remote device you wish to program.

**Note:** The name and location of this button may vary, depending on the manufacturer of the remote device.

2. Press and release the **smart/learn program** button, and within 30 seconds, press and hold the desired memory button on the RF transceiver for 2 seconds.

**Note:** You may need to press and hold the memory button on the RF transceiver for 2 seconds, a further 2 times.

**Note:** Some entry gate systems require you to cycle (press and re-press) the hand-held transmitter every 2 seconds during programming. If this is the case, continue to press and hold the memory button on the RF transceiver until the LED flashes quickly.

The RF transceiver should now be programmed. Repeat the programming steps, if you wish to add further remote devices to the RF transceiver.

To operate a programmed remote device, press and hold the relevant memory button on the transceiver. Release the button when the device starts operating.

## REPROGRAMMING A SINGLE GARAGE DOOR OPENER BUTTON

To program a remote device to a previously programmed RF transceiver memory button:

1. Press and hold the desired RF transceiver memory button. After approximately 20 seconds, the LED will start to flash slowly.
2. Follow the instructions described in step (2) onwards, as described in **PROGRAMMING**.

## TO ERASE ALL PROGRAMMING

To erase all programming from the RF transceiver:

1. Switch the vehicle's ignition on.
2. Simultaneously press and hold memory buttons **1** and **3** on the RF transceiver.

After approximately 10 seconds, the RF transceiver LED will start to flash. At this point, release both memory buttons on the RF transceiver. All programming will have now been erased from the RF transceiver.

**Note:** Do not press and hold the buttons for longer than 20 seconds.

## INFORMATION AND ASSISTANCE



It is recommended that when you sell the vehicle, you erase all programming from the RF transceiver.

## Garage door opener

For information on the range of compatible remote devices, or for assistance, contact your Retailer/ Authorised repairer. Alternatively, visit the HomeLink website: [www.homelink.com](http://www.homelink.com).

**Note:** Retain the original remote feature handset, for future programming requirements.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment. Such modifications could void the user's authority to operate the equipment.