## **INTERIOR LIGHTS**



- 1. Front seat footwell lamps: Automatically illuminate when the doors are opened, or the courtesy lamps are switched on manually.
- 2. Front reading lamps: Touch the left or right side of the sensor lens briefly, to switch on/off.

**Note:** To complete the operation, move your finger at least 20 mm from the lens.

**3.** Front courtesy lamp: Touch the centre of the sensor lens briefly to switch on/ off. To switch automatic illumination on or off, hold your finger on the lens until the lamp flashes.

**Note:** To complete the operation, move your finger at least 20 mm from the lens.

In Auto mode, the lamps will illuminate when a door is opened.

- **4.** Vanity mirror lamp: Slide the cover open/shut for on/off.
- 5. Rear seat footwell lamps: Automatically illuminate when the doors are opened.
- **6.** Puddle lamps: Automatically illuminate when the doors are opened.
- **7.** Rear reading lamps: Touch the lens briefly to switch on/off.