



# Heating and ventilation

When the heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and no cause for concern.

 **Do not operate the Auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust, causing a fire/explosion.**

 **Do not operate the Auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build-up of highly toxic fumes, which may cause unconsciousness or death.**

## TIMED CLIMATE CONTROL

The Timed climate control system provides a comfortable temperature inside the cabin in advance of the driver and passengers entering the vehicle.

The Auxiliary heater is also operated to warm the engine and aid starting in very cold conditions.

**Note:** *If the Auxiliary heater is used to warm the engine, the cabin will not be warmed.*

The Timed climate control system is set and controlled by the Touch screen. It can also be activated/deactivated by the Timed climate remote control.

**Note:** *The time setting can only be adjusted via the Touch screen.*

The system may not operate or will switch off automatically in the following scenarios:


- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at, or above, its required temperature.

## SETTING TIMED CLIMATE

The Touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the climate control **AUTO** or **A/C** button will flash. **AUTO** indicates the engine or cabin are being heated. **A/C** indicates the cabin is being ventilated. The choice of operation is automatically determined by the system depending on external temperature.

**Note:** *The system will cease operation when the engine is started*

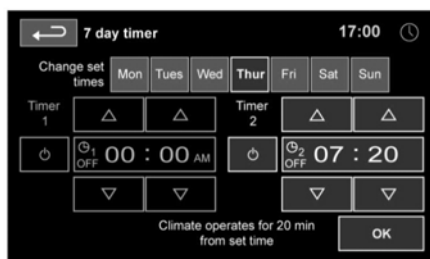

To set a Timed climate program:

1. Touch the **Timed Climate** soft key in the **Extra Features** menu, see **87, EXTRA FEATURES**. Select **7 day timer**, or **single event**, then select the timer button. If 7 day timer is selected, then select the day for which you want to set a program. Alternatively, select **All Week** to select the same start time for every day.
2. Touch the **Timer 1** or **Timer 2** icon. The timers can be toggled between on and off using the power soft key.