


## MAP SPLIT SCREEN

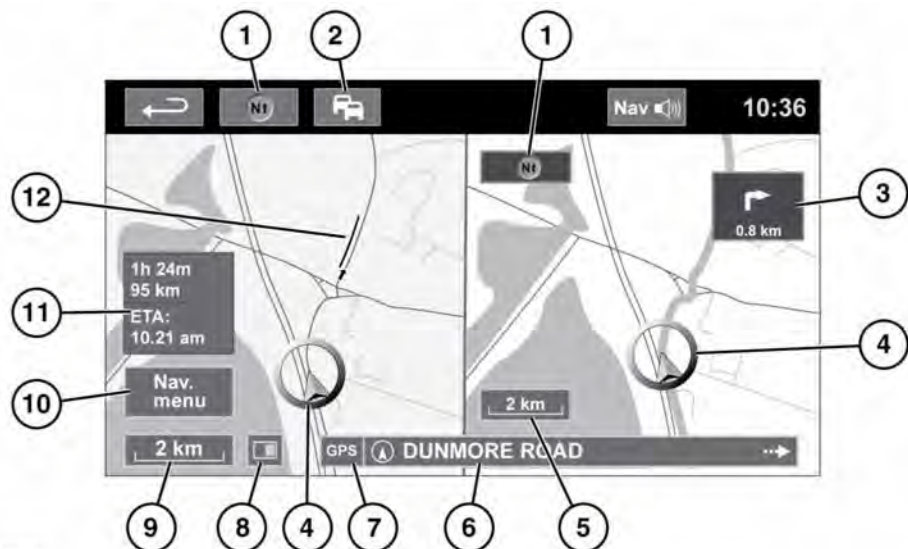

1. Compass (always indicates north):  
Press to select: north up, heading up or bird's eye map style.
2. TMC (Traffic Message Channel) signal:  
Without a diagonal bar, a signal is being received; with a diagonal bar, a signal is not being received. The icon will also change colour depending on the status of traffic on the route.
3. Next direction display: When Junction map view has been switched off, touch the icon to view again.
4. Current vehicle position and direction.
5. Right map view, scale/zoom setting.
6. Current location.
7. GPS signal indicator: The indicator is only displayed when there is no reception.
8. Screen mode.
9. Left map view, scale/zoom setting.
10. Opens the Navigation menu; 1 of 2 screens.
11. Distance/time/ETA (estimated time of arrival) to the destination.
12. TMC event (traffic congestion).



Touch to close the Junction and Motorway junction mode. The previously displayed map is shown after closing.

## MAP AUTO ZOOM

When under guidance, the map zooms in automatically when approaching a road junction or motorway junction.

1. From the map screen, touch the left map view, scale/zoom soft key.