



E151133

Make sure the coolant level remains between the **MIN** and **MAX** indicator marks, located on the side of the expansion tank.

If coolant/steam is expelled from the pressure cap or the level has dropped suddenly, or by a large amount, arrange for the vehicle to be examined by a Retailer/Authorised repairer as soon as possible.

TOPPING UP THE COOLANT

- ⚠ **Never remove the filler cap when the engine is hot - escaping steam or scalding water could cause serious personal injury.**
- ⚠ **Avoid spilling antifreeze onto a hot engine - a fire may result.**
- ⚠ **Unscrew the filler cap slowly, allowing the pressure to escape before removing completely.**
- ⚠ **Antifreeze is poisonous and can be fatal if swallowed - keep containers sealed and out of the reach of children. If accidental consumption is suspected, seek medical attention immediately.**

⚠ **If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of clean water.**

ⓘ When travelling in territories where the water supply contains salt, always make sure you carry a supply of fresh (rain or distilled) water. Topping up with salt water will cause serious engine damage.

ⓘ The use of non-approved antifreeze will have an adverse effect on the engine's cooling system and; therefore, engine durability.

⚠ **Antifreeze will damage painted surfaces; soak up any spillage with an absorbent cloth immediately, and wash the area with a mixture of car shampoo and water.**

Top up to the **MAX** mark, located on the side of the expansion tank. Use only a 50% mix of water and the approved antifreeze. See **330, LUBRICANTS AND FLUIDS**.

The specific gravity of a 50% antifreeze solution at 20°C is 1.068 and protects against frost down to -40°C.

Antifreeze contains important corrosion inhibitors. The antifreeze content of the coolant must be maintained at 50% ± 5% all year round (not just in cold conditions). To make sure that the anti-corrosion properties of the coolant are retained, the antifreeze content should be checked once a year and completely renewed every ten years, regardless of distance travelled. Failure to do so, may cause corrosion of the radiator and engine components.