

## Audio/video overview

The player will accommodate one disc at a time but up to 10 CDs can be uploaded into the CD store. Only Compact Disc Digital Audio (CDDA) discs can be uploaded into the CD store.

Only discs with CDDA tracks and no other type, can be uploaded to the Stored CD store.

Insert a disc into the loading slot until resistance is felt. The player mechanism will complete the loading.

8. Press to increase the volume for any source.
9. Seek up:
  - Short press to select the next radio preset, or to select the next track on a chosen audio source, CD, MP3, etc.  
  
When the phone is in use, press to scroll up lists of calls or phonebook entries.  
  
Press to select the next TV channel on the channel list or the next DVD chapter.
  - Long press to auto-seek up the frequency to the next radio station.

10. Press to decrease the volume for any source.

### 11. MODE:

- Short press to scroll through all the Media sources.
- Long press to scroll through the Media source sub-selections, e.g. in My music: iPod, Bluetooth, stored CD and CD.

12. Seek down:

- Short press to select the previous radio preset, or to select the previous track or start of the current track on a chosen audio source, CD, MP3, etc.

When the phone is in use, press to scroll down lists of calls or phonebook entries.

Press to select the previous TV channel on the channel list or the previous DVD chapter.

- Long press to auto-seek down the frequency list to the next radio station.

## AUDIO SETTINGS


To view the **Audio settings** menu, touch the Setup icon on the **Home menu** screen, and then select **Audio**.

**Note:** If previously enabled, the **Audio settings** menu may also be accessed from the **Shortcuts Menu** screen.

To adjust the sound settings:

- Select **Tone**, followed by the **+** or **-**, to adjust the **Bass**, **Treble** or **Sub** levels.

To adjust balance and fade:

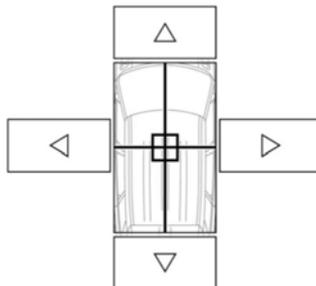

E 150928