

- ❗ To avoid overheating the gearbox, it is not advisable to tow heavy trailer loads at speeds of less than 32 km/h (21 mph) in high range. Select low range instead.
- ❗ The use of weight distribution hitches is not recommended.

## HITCH GUIDANCE

Hitch guidance is a user selectable Touch screen feature that can aid the process of guiding the vehicle to a trailer's tow hitch. Use Hitch guidance while reversing the vehicle to a trailer hitch.

Proceed, as follows:

1. Select reverse gear. Dependent on the vehicle's specification, the Touch screen will automatically display selectable icons or a menu list.
2. Touch the Hitch guidance menu or the icon, on the Touch screen, to enable the guidance lines to be displayed.
3. Reverse the vehicle towards the trailer.
4. As the vehicle closes to within 600 mm of the trailer's tow hitch, an automated zoom feature is operated to enlarge the view.
5. Continue the manoeuvre carefully until the vehicle and trailer are as close as required.

## TOW ASSIST

**Note:** Tow assist requires a connected trailer to be fitted with a tracking target sticker, which **must** be attached according to specific instructions. Ask a Retailer/ Authorised Repairer for details.



E134952

**Note:** This feature may not operate with all trailer designs.

Tow assist aids trailer reversing, by displaying guidance lines on the Touch screen.

Tow assist becomes active when a trailer/ caravan is attached to the vehicle and the trailer's electrical plug is attached to the vehicle's socket.

**Note:** The driver's door must be opened and closed after the trailer/caravan is connected to the electrical socket, before the system will detect the connection.

The screen will display a choice for connection. Select **YES** to move to the setup screen. Select **NO** to return to the previous screen.

**Note:** If the connection is not detected, setup can be manually prompted by touching the Tow assist soft key on the **Camera** menu. See **154, SURROUND CAMERA SYSTEM**.