


LABEL LOCATIONS



Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the starter switch is switched on.

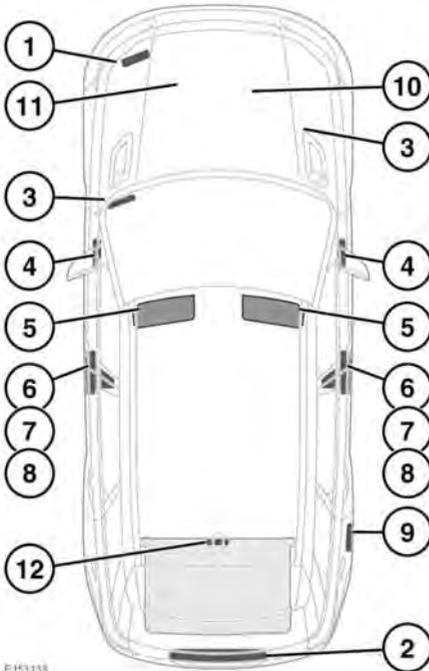

E1F5133

1. Bonnet locking platform - Air conditioning label.
2. Top of the battery - Battery warning symbols.

3. The Vehicle Identification Number (VIN) is stamped on a plate visible through the lowest part of the left side of the windscreen. The number is also stamped into the right-side suspension tower.

Note: If you need to communicate with a Retailer/Authorised Repairer, you may be asked to quote the VIN number.

The vehicle's built date is shown on the VIN plate.

Note: This is the calendar month and year in which the body and power train assemblies were conjoined and the vehicle was driven from the production line. The vehicle's built date is shown on the tyre pressure label, attached to the right side B pillar.

4. End of the fascia (passenger side) - Passenger airbag label.
5. Sun visor - Airbag label, vehicle handling label.
6. Base of B pillar - VIN number.
7. Base of B pillar or inside base of front door - Tyre pressure label, airbag warning label.
8. Mid-way up the B pillar - Side airbag warning label.
9. Inside fuel-filler flap - Fuel label.
10. Engine number: V6 and V8 Petrol - The number is located on the front of the right-side camshaft cover.
11. Engine number:
 - V6 Diesel - The number is located on the front of the left-side camshaft cover.
 - V8 Diesel - The number is located on the top of the engine, on the left side of the inlet manifold.

12. Underside of loadspace cover - loadspace cover warning label.

It is important that you are familiar with these subjects, to make sure that your vehicle and its features are used safely.