


## REAR CLIMATE CONTROL

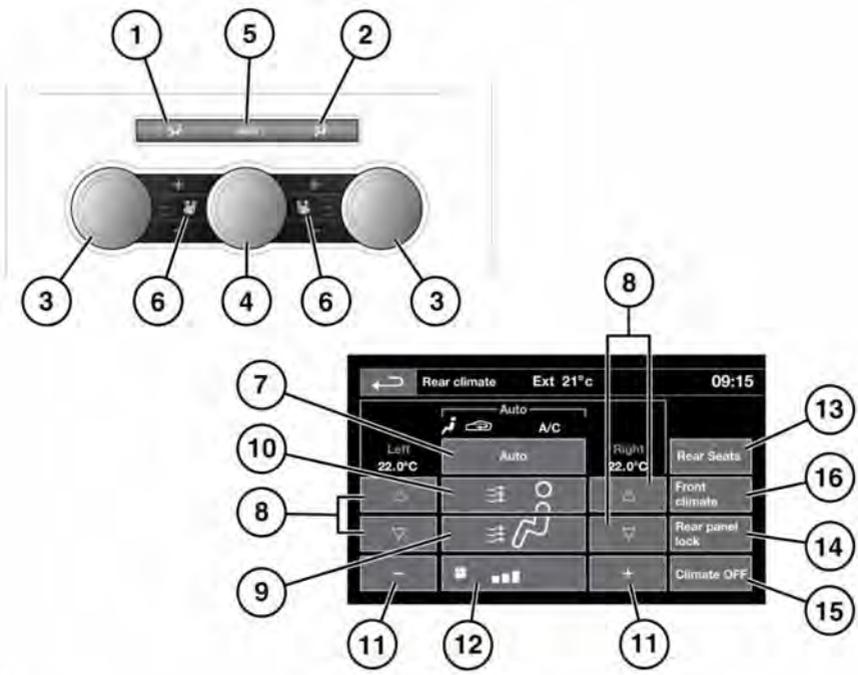

E 510064

There are two types of Rear climate control: 3 Zone and 4 Zone. All of the 3 Zone controls will affect the whole of the rear passenger compartment. 4 Zone allows independent control of each side. To access the Rear climate Touch screen menu, select **Rear climate** from the **Front climate** menu.

**Note:** When **DEFROST** is selected at the front, rear control is suspended until the defrost program ends.

**Note:** When the **SYNC** button is selected on the **Front climate** screen, the rear zones are controlled by the driver's settings.

**Note:** More than one setting may be selected at a time, to achieve the desired air distribution.

1. Air distribution to the feet: Press to switch on/off. The button LED indicator lamp will illuminate when ON.
2. Air distribution to the face: Press to switch on/off. The button LED indicator lamp will illuminate when ON.
3. Temperature controls: Rotate to adjust between 16°C - 28°C. The temperature is displayed on the Touch screen, **Rear climate** menu.
4. Blower speed control: Rotate to adjust.

# Heating and ventilation

5. Press **AUTO** to select fully automatic operation. The system adjusts the heat output, blower speed, air intake and airflow distribution, to maintain the selected temperature(s) without further adjustments. The air distribution and blower controls may be operated independently, to override the automatic mode. If you do this, the indicator lamp on the switch goes out. Press again to return to fully automatic operation.
6. Heated/Climate seats temperature controls. Select the upper button to increase and the lower button to decrease the temperature. The 3 bar light display shows the temperature status.
7. Touch to select **Auto** mode on/off.
8. Temperature controls: Select the red arrow to increase and the blue arrow to decrease the temperature. The temperature settings are displayed above the arrows.
9. Air distribution to the feet: Touch to switch on/off.
10. Air distribution to the face: Touch to switch on/off.
11. Blower speed control: Touch the + or the - soft key to adjust the blower speed.
12. Blower speed status indicator.
13. Touch **Rear Seats** to adjust the Heated/Climate seats temperature settings.
14. Touch **Rear panel lock** to disable the Rear climate control switches, to prevent the rear passengers from adjusting the Rear climate settings. Select again to re-enable the controls.

15. Touch **Climate OFF** to stop air flowing to the rear of the cabin.

16. Touch **Front climate** to open the **Front climate** menu.

In addition to the selectable controls, the Rear climate menu displays symbols that indicate the status of the heating and ventilation functions.

**Note:** *If the Climate control system is switched OFF, pressing a rear AUTO button will switch the Climate control system ON, unless disabled by the rear panel lock.*