

**9. Pause/Play:** Select to pause playback. Select again to resume playback.

**10. Information:** Touch to view more information about the current track.

**11. Shuffle:**

- Touch and release once to play random tracks from the current CD, MP3 folder, USB folder, or iPod playlist. A **Shuffle** message is displayed.
- Touch and release again to play random tracks from CD, MP3 disc, USB folders, or tracks on the media device, or tracks loaded onto the CD store. **Shuffle all** is displayed.
- Touch and release again to cancel Shuffle mode.

**Note:** *Shuffle mode is not available for **Bluetooth** wireless technology devices.*

**12. Skip/Scan backward:**

- Touch and release within 3 seconds of track playback to skip to the previous track.
- Touch and release after 3 seconds of track playback to skip to the beginning of the current track.
- Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.

## PORTABLE MEDIA CONNECTIONS

Compatible portable devices include:

- USB mass storage devices (e.g., a memory stick). Devices must use FAT or FAT32 file format.

- iPod (iPod Classic, iPod Touch, iPhone, and iPod Nano are supported - full functionality for older devices cannot be guaranteed). iPod Shuffle functionality cannot be guaranteed.

**Note:** *iPod and iPhone are trademarks of Apple Inc., registered in the US and other countries.*

- Auxiliary device (personal audio, MP3 players, all iPods).

**Note:** *Auxiliary devices have no Touch screen control.*

If you are connecting an iPod, mass storage, or a **Bluetooth**® wireless technology device, use the Touch screen to operate and search the device. Many of the controls are similar to those available for CD play.



Disconnect your iPod when leaving the vehicle. Failure to do so may result in the iPod battery discharging.

**Note:** *The Media system will play MP3, WMA, and AAC files.*

To maximise playback quality, it is recommended that lossless compression is used for any media files on USB or iPod. Failing this, it is recommended that compressed files utilise a minimum bit-rate of 192 kb/s (a higher bit-rate is strongly recommended).

**Note:** *Some MP3 players have their own file system that is not supported by this system. To use your MP3 player, you must set it to **USB Removable Device** or **Mass Storage Device** mode. Only music that has been added to the device in this mode can be played.*