

1. Touch **3 Routes** to display a choice of 3 different route options on the map. The roads on the map are drawn in 3 different colours to highlight each route. EcoRoute helps you find the most fuel efficient route available. A display of 3 leaves indicates the most fuel efficient route.
2. Select route **Quick**, **Short** or **Alt route** by touching the respective box displayed on the right side of the map.
3. Touch **Change route** followed by **Route preferences** to change the route settings.
4. When you have made your selection, if any, touch **GO**.

Note: As you approach a junction, in addition to the Voice guidance, an inset on the map will display an enlarged view of the junction.

AVOID POINTS

When calculating a route, an area to avoid can be set and stored.

1. From the **Nav menu**, touch **More....**
 2. Select **Stored locations**.
 3. Select **Avoid points**.
 4. Select **Add**.
 5. Select the location of the area to avoid from the **Destination entry** menu. Touch **Ok** to activate the view where the size of the area to avoid can be set. The size of the area can be adjusted by using the '+' and '-' symbols.
 6. Touch **Ok** to activate the area to avoid.
- To edit or delete an area to avoid from the stored list:

1. From the **Nav menu**, touch **More....**

2. Select **Stored locations**.
3. Select **Avoid points**.
4. From the sub-menu, select **Edit** or **Delete**.

EASY ROUTE

From **Route options** in the **Nav menu**, **Easy route** can be switched **On** or **Off**.

When **On** is selected, **Easy route** changes the calculation parameters of **Route 3** in order to reduce:

- Junctions.
- Turns.
- Turns that cross traffic.
- The priority of minor roads.
- Complex junctions and manoeuvres.

LEARN ROUTE

From **Route options** in the **Nav menu**, **Learn route** can be switched **On** or **Off**.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorise the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

VOICE GUIDANCE

To switch Voice guidance on or off but maintain route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when Voice guidance is enabled.