- When a phone is paired: Access the phonebook.
- When a phone is not paired: Access the phone connection screen.
- **22.** Touch to switch the Touch screen off. Press the **Home menu** button to switch the Touch screen back on.
- **23.** Touch to navigate to the left of the currently displayed screen.

TOUCH SCREEN USE

Do not use excessive pressure when selecting items on the Touch screen.

TOUCH SCREEN CARE

Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact a Retailer/Authorised Repairer.

TOUCH SCREEN SETUP

Touch the Setup icon on the **Home menu** screen. See **84, TOUCH SCREEN HOME MENU**.

Note: If previously enabled, the **Setup** menu may also be accessed from the **Shortcuts Menu** screen.

The **Setup** menu screen is divided into 4 categories:

- Screen
- System
- Voice
- Audio: See 176, AUDIO SETTINGS.

SCREEN SETTINGS

Volume pop-up: Displays the volume pop-up on/off icon.

Screensaver: Changes the screensaver.

Time out to home menu: The sub-menu selection screens can be set to revert to the **Home menu** screen after a predetermined length of time.

Theme: Changes the appearance of the Touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to switch the soft key confirmation tone **on/off**.

Clock adjust: Select the **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store the new settings.

Note: The clock can also be adjusted by touching the time display on the Touch screen.

Home menu shortcuts: Touch to select the vehicle's feature items, from the displayed list, to appear as shortcuts on the **Shortcuts Menu** screen.

Select **Clear all** to deselect all the previously highlighted (currently displayed) shortcuts and disable them from appearing on the **Shortcuts Menu** screen. Alternatively, touch each highlighted item to deselect individual features from the displayed list.

Select **Default** to enable the vehicle's predetermined shortcuts to be displayed.

Language: Select the required language. Select Male or Female voice. Touch Change to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.