



Touch screen

- When a phone is paired: Access the phonebook.
 - When a phone is not paired: Access the phone connection screen.
22. Touch to switch the Touch screen off. Press the **Home menu** button to switch the Touch screen back on.
23. Touch to navigate to the left of the currently displayed screen.

TOUCH SCREEN USE

-  Do not use excessive pressure when selecting items on the Touch screen.

TOUCH SCREEN CARE

-  Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact a Retailer/Authorised Repairer.

TOUCH SCREEN SETUP

Touch the Setup icon on the **Home menu** screen. See **84, TOUCH SCREEN HOME MENU**.

Note: *If previously enabled, the **Setup** menu may also be accessed from the **Shortcuts Menu** screen.*

The **Setup** menu screen is divided into 4 categories:

- **Screen**
- **System**
- **Voice**
- **Audio:** See **176, AUDIO SETTINGS**.

SCREEN SETTINGS

Volume pop-up: Displays the volume pop-up on/off icon.

Screensaver: Changes the screensaver.

Time out to home menu: The sub-menu selection screens can be set to revert to the **Home menu** screen after a predetermined length of time.

Theme: Changes the appearance of the Touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to switch the soft key confirmation tone **on/off**.

Clock adjust: Select the **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store the new settings.

Note: *The clock can also be adjusted by touching the time display on the Touch screen.*

Home menu shortcuts: Touch to select the vehicle's feature items, from the displayed list, to appear as shortcuts on the **Shortcuts Menu** screen.

Select **Clear all** to deselect all the previously highlighted (currently displayed) shortcuts and disable them from appearing on the **Shortcuts Menu** screen. Alternatively, touch each highlighted item to deselect individual features from the displayed list.

Select **Default** to enable the vehicle's predetermined shortcuts to be displayed.

Language: Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.