

Heating and ventilation

The LED indicator signals various states and conditions for the remote Timed climate system, as follows:

- Illuminates green when the **ON** button is pressed and then quickly flashes green, to indicate that heater operation has been requested.
- Illuminates green followed by red when the **OFF** button is pressed, to indicate that the heater has been requested to shut down.
- Illuminates green and then quickly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is no communication with the receiver. This normally occurs if the vehicle is too far away.
- Illuminates green and then slowly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is an error.
- Flashes red when either the **ON** or **OFF** button is pressed, to indicate that the Timed climate remote battery needs replacing.

Note: *The Timed climate remote will only operate once per engine start to maintain battery condition.*

ADDITIONAL REMOTES

Extra remote controls can be programmed to operate the heater. A maximum of 4 remote controls can be programmed to the vehicle. Contact a Retailer/Authorised Repairer to purchase extra remote controls and have them programmed to the vehicle.

REPLACING THE REMOTE BATTERIES



E144902

With the front of the remote control facing upwards, press down on the rear of the access cover and push completely off to reveal the battery compartment. Note that the battery should be inserted with the positive side facing upwards. Remove the old battery and make sure the correct polarity is maintained. Insert a new, unused 3 volt CR2032 battery. Align and push the cover back to the original position.