


## MANUAL SEATS

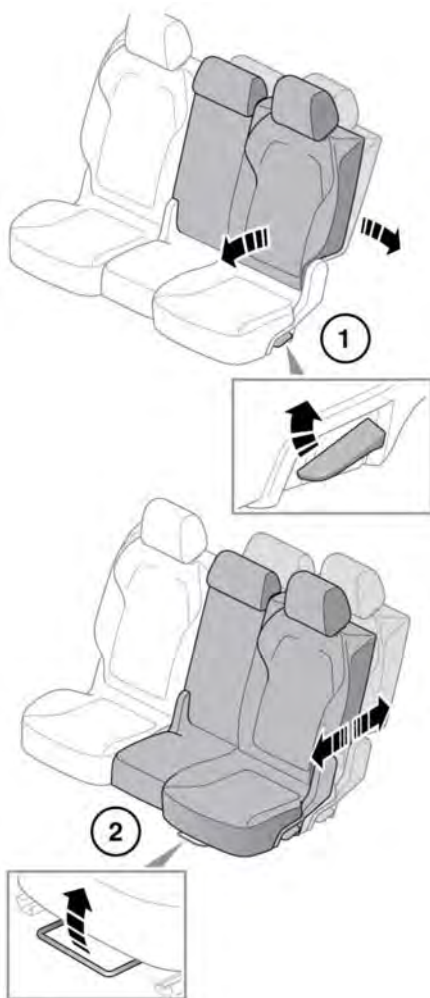


E177087

1. To adjust the seatback angle: Lift and hold the adjustment lever, and move the seatback to the desired angle. Then release the adjustment lever.

2. To move the seat forwards or backwards: Lift the bar, and move the seat to the desired position. Then release the bar.

## PASSENGER SEAT AWAY

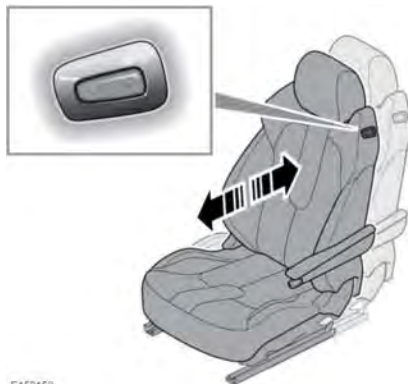

E150158

Use the switch for forward or rearward adjustment.

The front passenger seat position can be adjusted to provide more space for the rear seat occupants.

**Note:** The Passenger seat away function does not operate if the front passenger seat belt is fastened.

## FOLDING AND RAISING THE REAR SEATS



Always make sure that objects carried in the vehicle are secured properly.



Never allow passengers to travel in the load space under any circumstances.