

MANUAL SEATS



E177087

1. To adjust the seatback angle: Lift and hold the adjustment lever, and move the seatback to the desired angle. Then release the adjustment lever.

2. To move the seat forwards or backwards: Lift the bar, and move the seat to the desired position. Then release the bar.

PASSENGER SEAT AWAY



E150158

Use the switch for forward or rearward adjustment.

The front passenger seat position can be adjusted to provide more space for the rear seat occupants.

Note: The Passenger seat away function does not operate if the front passenger seat belt is fastened.

FOLDING AND RAISING THE REAR SEATS

- ⚠ Always make sure that objects carried in the vehicle are secured properly.
- ⚠ Never allow passengers to travel in the load space under any circumstances.