

- ❗ When a fuse box lid is removed, take care to protect the box from moisture and refit the lid at the earliest opportunity.
1. To access the luggage compartment fuse box, open the rear tailgate. Remove the access panel, by grasping the top of the panel and pulling sharply.
 - When refitting the access panel, make sure the locating/securing pegs are aligned with their respective holes, before pushing the panel fully home.
 2. Luggage compartment fuse box. A label, located in a slot under the fuse box, shows the circuits protected and the fuse locations.
 3. To access the passenger compartment fuse box, open the glove box. See **97, STORAGE COMPARTMENTS**. Firmly press the top of the support stay at each end and lower the glovebox into the footwell. A label on the front of the fuse access panel shows the circuits protected and the fuse locations. Remove the panel to gain access to the fuses.
 4. To access the engine compartment fuse box, remove the under bonnet cover. See **257, UNDER BONNET COVERS - REMOVAL**.
 5. Lift up the edge of the leaf screen panel just enough to allow removal of the fuse box cover.
 6. Remove the fuse box cover, by releasing the clips on each end. A label on the inside of the cover shows the circuits protected and the fuse locations.

CHANGING A FUSE

- ❗ Fit Land Rover approved replacement fuses of the same rating and type, or fuses of a matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.
- ❗ If the replacement fuse blows after installation, the system should be checked by your Retailer/ Authorised Repairer.

Note: *It is recommended that relays should only be replaced by qualified persons.*

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.