

This procedure can also be used for changing from low range to high range with the vehicle travelling at a speed less than 60 km/h (38 mph).

- ⓘ Changing from high range to low range can only be performed while the vehicle is stationary.

LIMP-HOME MODE

If the vehicle detects a transmission system fault, a warning message will be displayed in the Message centre and only limited gears may become available. If possible, the vehicle should be carefully driven to the nearest place of safety. In this event, seek qualified assistance.

Note: *The driver should be aware that the vehicle's performance will also be reduced and must take this into account when driving. The use of the steering wheel gear shift paddles will also be disabled.*

Some transmission faults may cause the gear selector to be locked in position, until the ignition is switched off. A flashing gear status in the Message centre, indicates that the driver's gear request cannot be engaged. In this event, select Neutral (**N**) and then select the required gear change again.

If the gearbox is still unable to engage the requested gear, contact a Retailer/ Authorised Repairer.