



## FOLDING ARMREST

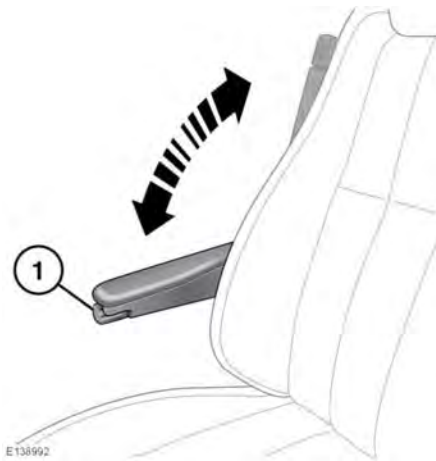

Use the adjuster wheel (1) to set the required height. The folding armrest may be stowed by moving to the vertical position.

## SEAT POSITION MEMORY

Once you have adjusted the power-operated driver's seat, the steering column (see **31, ADJUSTING THE STEERING WHEEL**) and the exterior mirrors (see **72, EXTERIOR MIRRORS**) for your ideal driving position, the settings can be stored for future use.

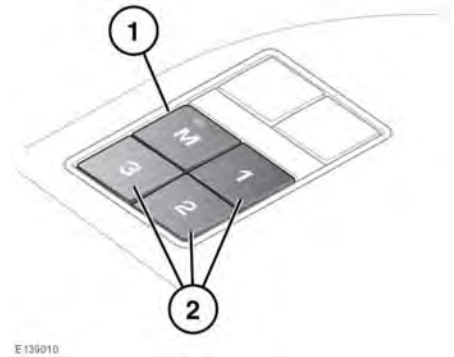

1. Press the memory store (**M**) button to activate the memory function.
2. Press one of the preset buttons within 5 seconds to store the current settings.

### **MEMORY (1, 2 or 3) SETTINGS**

**SAVED** will be displayed in the Message centre, accompanied by an audible chime to confirm the settings have been stored.

**Note:** A seat position will only be stored during the 5 second active period.

**Note:** Any existing settings will be over-written when storing a new position.

3. To recall a stored position, press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the Message centre.

## Front seats

**Note:** *The memory function for all passenger seats will not trigger any messages in the Message centre.*