

- **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
 - **Subtitles**
 - **Angle**
 - **Audio**
 - **Top menu**
5. **Menu:** Select to view the video media menu. On some screens, this may be replaced by a **Browse** soft key.
 6. **Seek up:** Select to view the next DVD chapter, or to scroll through video media files.
 7. **Select to pre-stop playback.** A second touch will stop and reset the DVD.
 8. **Select to start/restart play.**
 9. **Seek down:** Select to view the previous DVD chapter, or to scroll through video media files.

Use the relevant soft key to select the **4:3**, **16:9**, or **Zoom** option to magnify the picture.

For information about the use of the media controls, on the audio/video unit and the steering wheel buttons, see **175**, **AUDIO/VIDEO CONTROLS**.

VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving, the video picture will automatically be inhibited. The Touch screen will display the **TV/My video** screen and the relevant safety message will be displayed.

FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.