


TOUCH SCREEN HOME MENU

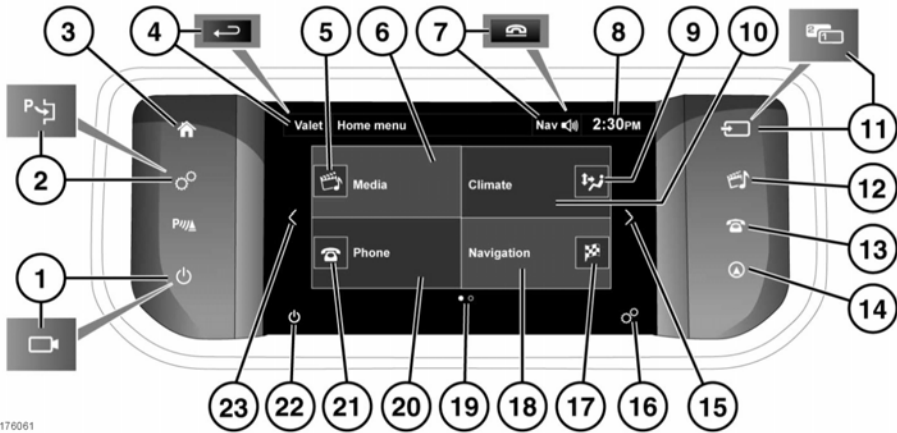

E176061

- ⚠ Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.**
- ⓘ** Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.
- ⓘ** Avoid spilling or splashing liquids onto the Touch screen.

The **Shortcuts Menu** is the next screen to the left of the **Home menu** screen. Use the **System settings** menu to enable/disable, select, or change which vehicle features are displayed on the **Shortcuts Menu** screen. See **86, SYSTEM SETTINGS**.

The **Extra features** menu is the next screen to the right of the **Home menu** screen. See **87, EXTRA FEATURES**.

- 1.** Press to switch the screen on/off. When Surround cameras are fitted, this icon is changed and the button will access cameras in the special views page. Touch the screen to display the options.
- 2.** Press to display the Touch screen **Setup** menu. When Park assist is fitted, this icon is changed and the button should be pressed to activate Park assist.
- 3.** Press to display the **Home menu**.
- 4.** Touch to select **Valet** mode. During menu mode, the icon is changed to a Return icon; touch to return to the previous screen.
- 5.** Touch to carry out the following operations:
 - CD, Bluetooth, and USB: Alternate between play and pause.
 - DVD in normal play: Short press to pause, or long press to activate slow play.

- DVD in slow play or paused:
Activate normal play.
6. Touch to display the Media menu screen. See **175, AUDIO/VIDEO CONTROLS**.
Dependent on the status of the current media selections, this may also display the following:
 - File and status information for the current media selection.
 - Audio icon/information (e.g., news, AM/FM, album/song title, etc.).
 7. While the Navigation system is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed to a Phone icon; touch to end a call.
 8. Time display: Touch to adjust the time/date.
 9. Displays the current heating and ventilation distribution settings.
 10. Touch to display the **Climate** menu screen.
Dependent on the status of the current Climate settings and previous selections, this may also display the following:
 - The system status.
 - The external temperature.
 11. Press to scroll through Media sources. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
 12. Press to display the Media menu, see **175, AUDIO/VIDEO CONTROLS**.
 13. Press to display the **Nav menu** screen.
 14. Press to display the **Phone** menu screen.
 15. Touch to navigate to the right of the currently displayed screen.
 16. Touch to display the **Setup** menu. See **86, TOUCH SCREEN SETUP**
 17. Touch to carry out the following operations:
 - When no route guidance is selected: Access the **Destination entry** menu.
 - When route guidance is selected: **Cancel guidance**.
 18. Touch to display the **Nav menu** screen.
This may also display the following:
 - When no route guidance is selected: The vehicle's current location is shown.
 - When route guidance is selected: The location of the current destination, the Destination/waypoint icon, Expected Time of Arrival (ETA), and the time and distance to the current destination/waypoint are shown.
 - Navigation icons (e.g., destination entry, cancel guidance, etc.).
 19. Screen position indicator, for the currently displayed screen.
 20. Touch to display the **Phone** menu screen. See **209, TELEPHONE SYSTEM OVERVIEW**.
This may also display the following:
 - The currently connected phone's name and network, or the phone's pairing status.
 - Phone icons (e.g., do not disturb, battery status, signal strength, Bluetooth, voicemail).
 21. Touch to carry out the following operations: